

# Heat Pump - Initial Setup Guide

## ecobee3<sup>lite</sup>



1



Select "Yes, only Rc is connected" then tap "Next".

2



Ensure that Rc, G, Y<sub>1</sub>, O/B, C, and W<sub>1</sub> are the only wiring terminals highlighted then tap "Yes."

3



Select "No accessory installed" then tap "Next".

4



Select "°F" then tap "Next".

5



Select "Air to air" then tap "Next".

6



Select "On cool" then tap "Next".

# Heat Pump - Initial Setup Guide

## ecobee3<sup>lite</sup>



7



Select "Enable" then tap "Next".

8




Scroll to the far left and select "Disabled" then tap "Next".

9



Select "Furnace" and tap "Next".

10

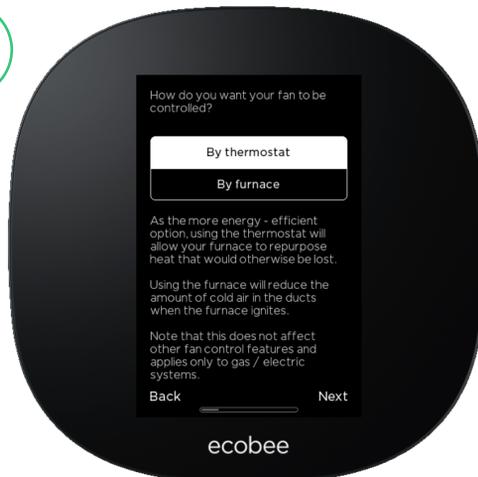

Select "By thermostat" and tap "Next".

## ecobee is here to help

Have questions or concerns? Get in touch.

[support.ecobee.com](http://support.ecobee.com)

[support@ecobee.com](mailto:support@ecobee.com)

1-877-932-6233