

Conventional Furnace - Initial Setup Guide

ecobee3^{lite}



1



Select "Yes, only Rc is connected" and tap "Next".

2




Ensure that Rc, G, Y₁, C, and W₁ are the only wiring terminals highlighted and tap "Yes."

3




Select "°F" and tap "Next".

4

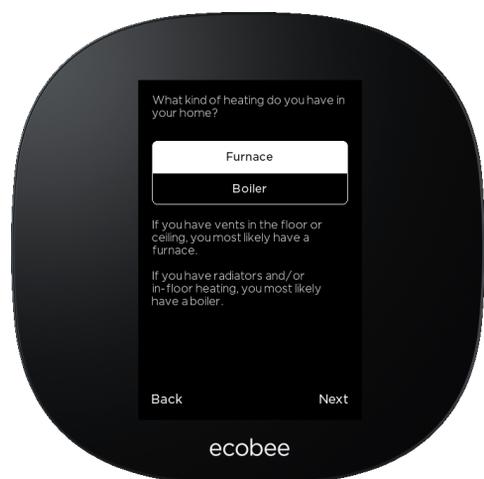

Select "Furnace" and tap "Next".

5

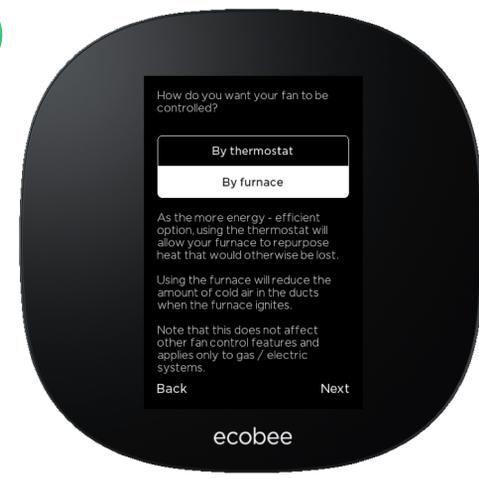

Select "By furnace" and tap "Next".

ecobee is here to help

Have questions or concerns? Get in touch.

support.ecobee.com

support@ecobee.com

1-877-932-6233